 



## 包装盒内包括

### Soundbrenner Pulse

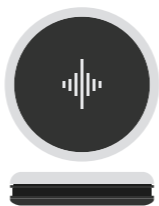


充电底座

 充电线




長手帶

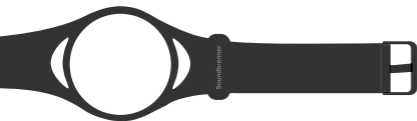 

短绑带


## 电池充电

 装置包装附有 USB 数据线和磁性充电站, 你可以将它插入任何一台电脑的 USB 端口, 或使用 USB 墙上适配器, 包括那些智能手机或平板电脑的数据线。

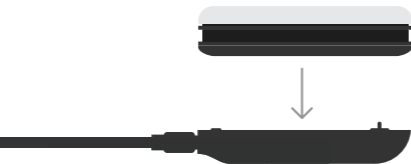

### 充电中

 在充电时, 标识将慢慢闪烁橙色。

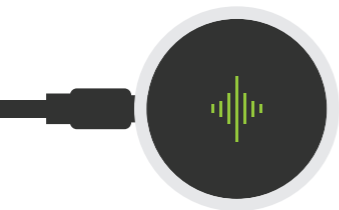

### 充满电

充电完成时, 标志会变成绿色。

 
**注意**

当你拿出盒子的装置之后, 充电至少30分钟。完全充电最多需要2.5小时。

平均而言, 一个完整的充电将让你长达 6小时的使用时间。

## 下载应用程序

为了获得更大的功能和自定模式, 你可以下载 Soundbrenner 的本地移动伴侣应用程序。你可以在 iOS 的 App Store 或谷歌 Play 商店搜索 “Soundbrenner”, 或访问 [www.soundbrenner.com/start](http://www.soundbrenner.com/start), 并按照链接接到正确的下载。

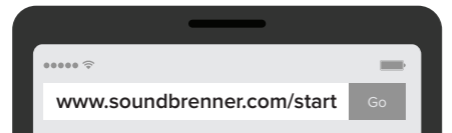

我们还创建 Soundbrenner DAW Tools 用于 Mac OS X。它与每一个主要的 DAW 套件 - 包括 Avid Pro Tools, Ableton Live 和 Logic Pro X - 并显示为 MIDI 控制器, 可用于配置 Soundbrenner 装置启动和停止录音, 打开点击轨道, 甚至控制延迟或其他声音效果的效果。

要开始使用 Soundbrenner DAW Tools, 请访问 [soundbrenner.com/dawtools](http://soundbrenner.com/dawtools)。

## 系统要求



设备  
iPhone 4S / iPod touch 5 / iPad 3 and later  
大多数现代的 Android 手机和平板电脑

操作系统  
iOS 8.4 and later  
Android 4.3 and later

 


设备  
任何 MAC 台式机电脑或笔记本与蓝牙4.0

操作系统  
OS X 10.10 Yosemite and later

## 如何摆放装置在手带

- 1 寻找围绕在装置边缘的槽



- 2 把装置插入带的一侧



- 3 使用你另一只手, 向上拉带的另一侧, 直到其卡入到位

**注意**

请确保您牢牢掌握装置在手带中。您可能需要使用您的拇指, 以帮助它完全容纳在手带。



在视频上观看  
[SNBR.IO/U11](https://SNBR.IO/U11)

## 穿戴位置

根据您和您所演奏的乐器, 把装置放在身体不同的位置都会有很大的影响。

你能在不同的位置尝试不同的带子, 看看哪个会有最好的感觉。记住要保持带子紧 - 肩带越紧, 就会感到越强的振动。



提示

尝试把 Soundbrenner Pulse 穿在你身体的一部分, 当使用时尽量不要移动太多。



在使用长带子时, 您可以轻松将它滑过你的手臂。

## 如何感受节拍

振动式节拍器的使用和普通的节拍器非常不一样。

刚开始使用 Soundbrenner Pulse 时,几乎就像是从头学习跟节拍一样。不要放弃,随着时间的推移您会做得越来越好,这跟用传统节拍器练习是同样的道理。

最大的区别在于感受每一个节拍的方式不同。有些人对振动和对咔哒声的反应不一样;随着时间的推移,振动甚至可以演变成您潜意识里的感觉,有助于您在无意识间保持节奏。

提示

不要放弃,随着时间的推移您会做得越来越好,这跟用传统节拍器练习是同样的道理。

振动的时长和强度非常关键。

Soundbrenner Pulse 支持九种不同的触觉配置。您可以选择短、中、长时间振动,每种振动有三种强度可选。

每个人感受振动的方式都不同,因此您应当选择最适合自己的振动模式。设置好您的 Soundbrenner Pulse 之后,请访问设备设置菜单中的触觉部分,体验一下不同的振动方式。

 
提示

设置好您的 Soundbrenner Pulse 之后,请访问设备设置菜单中的触觉部分,体验一下不同的振动方式。



## 打开和关闭

要打开 Soundbrenner Pulse 或关闭, 先在环上任何一个方向拧至少有1/4圈 - 然后用两根手指按上两秒钟。

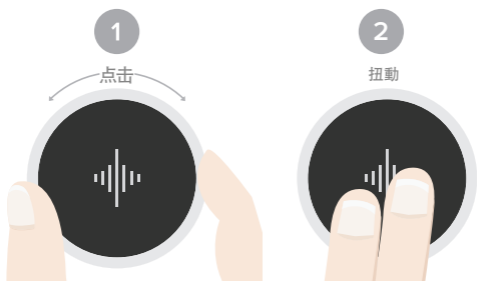

当 Soundbrenner Pulse 启动时，它会发出白光，并强烈振动半秒。该标志将一直亮着，直到你关闭设备。

关断期间，Soundbrenner Pulse 会亮起简单的白色光。一旦不再发光，它是关闭的。

提示

当你使用完装置，请务必将您的 Soundbrenner Pulse 关掉（使用相同的过程）



在视频上观看  
[SNBR.IO/U13](https://SNBR.IO/U13)

## 互动

### Play and Pause

点击 2x



用两根手指点击两次，可快速连续播放或暂停节拍器。

### BPM Tap

点击 3x



用两根手指，轻拍装置至少连续叁次。该装置将能调教到你想要的平均速度。

提示

一定要使用两个手指平坦地放置在表面上进行轻拍。不要只用你的指尖。

### BPM Wheel

扭動



扭轮逆时针降低 BPM 或顺时针增加 BPM。



在视频上观看  
[SNBR.IO/U14](https://snbr.io/u14)



## 状态警报

### 低电量

当电池电量低于20%，装置则会震动和闪烁红色叁次。



#### 注意

完全充电最多需要2.5小时。平均而言,一个完整的充电将让你长达6小时的使用时间。

### 失去了连接

当 Soundbrenner Pulse 与您的设备失去连接时，会自动进入查找模式，并闪烁蓝光以提示。



要重新将 Soundbrenner Pulse 连接到您的设备，请打开 Soundbrenner 应用程序，轻击设置，然后在菜单中轻击已断开的 Soundbrenner Pulse 的名字。

#### 注意

您可以退出发现模式并无需重新连接 - 只需在触摸表面上点击一次。





在视频上观看  
[SNBR.IO/U15](https://SNBR.IO/U15)

## 多重链路

您可以连接多达五个Soundbrenner Pulse，以一个单一的智能手机或平板电脑，让你的整个乐队-甚至只是你和你的音乐老师 - 感受一起跳动。


一旦你连接你自己的Soundbrenner Pulse到移动设备，这能增加更多的方便。


 **iOS:** 只需打开应用，点击设置选项卡，然后点击“连接一个Soundbrenner Pulse”。

 **Android:** 只要启动应用程序，打开导览抽屉，然后点击“添加设备”。

当您在节拍器的银幕播放，每次连接Soundbrenner Pulse将开始同步振动。其中非常重要而需要注意的是振动和光设置能以每个单元被设置的：你会能感受同样的节奏，但你可以自定其余的身体部份。

如果你需要从移动设备断开Soundbrenner Pulse，其过程很简单。

 **iOS:** 在设置选项卡，选择要断开的设备，然后向左侧滑动 - 一个“断开连接”按钮就会出现。

 **Android:** 在导览抽屉上，然后点击要断开设备上 - 一个“断开连接”按钮就会出现。



## 故障检修

 
如果您的Soundbrenner Pulse没有响应，重新启动装置通常会有所帮助。首先，确保你的充电站已连接到电源。

然后，围绕边缘拿着Soundbrenner Pulse - 注意不要摸顶面 - 把它放在反向充电引脚。

1



2

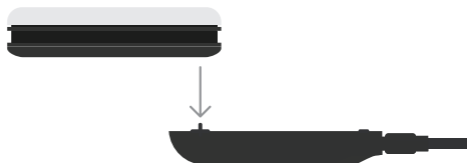

### 重新启动

如果重新启动成功,该装置将短暂闪烁红色。



#### 注意

如果你的装置仍在重新启动后行为异常，请确保你的应用程序是最新的。然后，连接到你的装置看到任何固件更新可用。



在视频上观看  
[SNBR.IO/U17](https://SNBR.IO/U17)

## 故障检修

如果您与你的Soundbrenner Pulse触摸表面有麻烦，这里有一些有用的提示，应该可以帮助你。

首先，确保你穿的设备-不只是抱着它在你的手中。我们的触摸传感器设计是在与皮肤接触能得到最好效果。

第二，一定要使用两个手指平坦地放置在表面上进行轻拍。不要只用你的指尖。

如果你发现很难控制在BPM启动或停止节拍器或敲击，试图更快地敲击。该Soundbrenner Pulse能分辨短按和长按的区分。

提示


一定要使用两个手指平坦地放置在表面上进行轻拍。不要只用你的指尖。




在视频上观看  
[SNBR.IO/U18](https://SNBR.IO/U18)

## 设置

因为我们知道每一个音乐人不同的是，我们提供了多种方式来定制Soundbrenner Pulse到您自己的喜好。


 要定制完全每个节拍或禁用振动，振动长度和强度：


 设置 → 点击您的设备 → 振动

 导览抽屉 → 点击您的设备 → 振动



要自定每个节拍的灯光颜色或完全禁用灯光：


 设置 → 点击您的设备 → Lights

 导览抽屉 → 点击您的设备 → Lights



要改变节拍器音或禁用从应用程序的滴答声：

 设置 → App Settings

 导览抽屉 → App Settings

## SAFETY INFORMATION

### **WARNING: Medical Conditions**

If you currently have a medical condition or have a history of medical conditions that may be affected by the Soundbrenner Pulse, consult with your physician before using the product. Medical conditions include (but are not limited to):

- White Knuckle Syndrome;
- Hand-Arm Vibration Syndrome (HAVS);
- Blackouts;
- Epilepsy;
- Postural Hypertension;
- Allergic Reactions to Silicone; or
- Any other heart, neurological, or skin conditions

### **WARNING: Medical Device Interference**

If you use any medical device that may be affected by the Soundbrenner Pulse, consult with your physician before using the product. Medical devices include (but are not limited to):

- Coronary Stents;
- Defibrillators;
- Pacemakers; or
- Any other implanted medical device

Stop using the Soundbrenner Pulse if you suspect that it is interfering with your medical device or if you experience any discomfort.

### **WARNING: Frequent and Prolonged Use**

Frequent and prolonged use of the Soundbrenner Pulse may cause skin irritation in some users. If you experience itchiness, redness, and/or swelling while using the Soundbrenner Pulse, remove the device immediately and stop using it until your skin returns to normal. Consult your doctor should any of the symptoms persist.

### **Caution: Electrical Equipment**

Your Soundbrenner Pulse and its charging station are electrical devices and should be handled with care.

Never use your device in extremely low or high temperatures.

Substances in this product and battery may harm the environment or cause injury if handled or disposed of improperly.

Remove your Soundbrenner Pulse if it feels warm or hot.

### **Caution: Magnets**

The charging station contains magnets. All credit cards, key cards, and any other object containing a magnetic stripe should be stowed safely away from the charging station.

**Caution: Batteries**

Use only an authorized Soundbrenner charging station to charge your device to avoid any safety or electrical hazards.

Do not attempt to change the battery on your own. This will void the warranty and could cause injury.

Always disconnect the charging station from the electrical socket as soon as your device is fully charged.

Never charge your device when moisture is present.

Never put your device or charging station near any inflammable or explosive materials.

**Caution: Water**

Even though your Soundbrenner Pulse is sweatproof and partially water-resistant, it should never be submerged in water under any circumstances.

Do not use your device in the rain or in wet environments for prolonged periods.

**Maintaining your Soundbrenner Pulse**

For optimal performance, we recommend that you don't use your device until it is fully charged.

Take care when using skincare products, as they may affect the color or usability of the included bands.

Store your Soundbrenner Pulse in a well-ventilated and dry environment when not in use.

Make sure you regularly clean your device with a damp cloth to maintain good hygiene.

Never wash your device in the sink.

**For warranty and regulatory information, see page 16.**

TM and © 2016 Soundbrenner Limited. All Rights Reserved.

## WARRANTY

This Limited Warranty does not cover the following:

- Our mobile apps and desktop software;
- Damage arising from negligence and/or improper use;
- Unauthorized modification;
- Theft or loss of the product; or
- Damage caused by natural disasters

Refer to the license agreement included in the software and the Soundbrenner Terms of Service for details of your rights with respect to proper use.

Soundbrenner will either repair, replace or refund your Soundbrenner Pulse at its own discretion. Warranty benefits are in addition to rights provided under local consumer laws.

For validation purposes, you are required to provide proof of purchase details when making a claim under this warranty.

### **Terms of Service**

Soundbrenner's terms of service can be viewed at <http://www.soundbrenner.com/terms>

### **Privacy Policy**

Soundbrenner's privacy policy can be viewed at <http://www.soundbrenner.com/privacy>



## REGULATORY INFORMATION

### FCC Compliance Statement

The device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

### EU Compliance Statement

Soundbrenner Limited hereby declares that this Soundbrenner Pulse is in compliance with the essential requirements and other relevant provisions of Directive 1995/5/EC.

### Disposal and Recycling Information

As signified by the symbol on the packaging, your product should be disposed of at a recycling center due to the device's electronic nature in order to encourage sustainable reuse and conservation of natural resources.

Disposing of the device separately from household wastes also prevents potential hazards to the environment or others.

### Bluetooth Information

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Soundbrenner Limited is under license. Other trademarks and trade names are those of their respective owners.

This product contains QD ID 78915. Declaration ID D029964.